



**SINCE 1968**

**CORDLESS  
HAND VAC**

**INSTRUCTION  
MANUAL**

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. Only use the appliance with the power supply unit provided. This appliance should not be operated by means of an external timer or separate remote control system. This appliance is intended for domestic use only. It should not be used for commercial purposes.

## **Battery Safety**

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use. Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise the battery pack.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a non-removable 11.1 V 2200 mAh Li-ion battery pack.



SEIT 1968

## Care and Maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Do not immerse the vacuum cleaner in water or any other liquid.

Keep the HEPA filter clean after every removal of the dust container.

## Dos and Don'ts

### **DO:**

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

### **DON'T:**

Use the vacuum cleaner without the HEPA filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

## Description of Parts



1. Cordless Hand Vac main unit
2. Power button
3. Charging base
4. Charging port.
5. HEPA filter
6. Filter cone
7. Crevice tool

8. Brush tool
9. Dust container
10. Dust container release button
11. Suction nozzle
12. Air inlet
13. Indicator light



SEIT 1968

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

### Charging the Cordless Hand Vac

Before first use, the vacuum cleaner must be charged for approx. 4-5 hours.

Subsequent charging times will vary dependent on use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 4-5 hours to fully recharge.

**STEP 1:** Check that the vacuum cleaner is switched off.

**STEP 2:** The charging base comes disassembled. Fit the two parts together, aligning the charging port on one piece with the end of the mains power adaptor on the other. Push together until they click into place. Secure the vacuum cleaner into position in the charging base.

**STEP 3:** Plug the mains power adaptor into the mains power supply; the indicator light will turn red during charging. Once the battery is fully charged, the indicator light will turn blue.

**NOTE:** Whilst charging, the vacuum cleaner main unit may become warm. Always make sure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

**WARNING:** Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

### Using the Cordless Hand Vac

The crevice tool is ideal for cleaning radiators, corners, recesses and other hard-to-reach areas. The brush tool is useful for removing dust and dirt from shelves, cupboards and windowsills.

**STEP 1:** Check that the vacuum cleaner is switched off and remove it from the charging base.

**STEP 2:** If required, fit the selected attachment by firmly inserting it into the air inlet.

**STEP 3:** Turn on the vacuum cleaner by pressing the power button.

**NOTE:** The indicator light will flash when the battery is running low and needs to be charged.

**WARNING:** Do not use the vacuum cleaner without the HEPA filter, filter cone and dust container in position. Clean the HEPA filter regularly to preserve suction.

## Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.

**STEP 1:** Hold the vacuum cleaner with the dust container facing upwards. Press the dust container release button and carefully remove the dust container cover from the dust container.

**STEP 2:** Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

**STEP 3:** Refit the suction nozzle by aligning it with the vacuum cleaner main unit and pushing into place until it clicks.

**NOTE:** It is recommended that the dust container is emptied outdoors.

## Cleaning the HEPA Filter and Filter Cone

The HEPA filter can only be accessed when the dust container is removed.

**STEP 1:** After emptying the dust container following the instructions in the section entitled 'Emptying the Dust Container', remove the dust container from the main unit by rotating clockwise until the arrows align to the 'unlocked' position.

**STEP 2:** Remove the HEPA filter and filter cone by pulling them out of the dust container.

**STEP 3:** Shake the HEPA filter until the majority of the dust has been removed, then rinse the filter and filter cone under clean, warm water and allow to dry naturally.

**STEP 4:** Once both are fully dry, place the HEPA filter back into the filter cone and insert into the dust container.

**STEP 5:** Insert the dust container into the main unit, align arrow to unlock symbol and rotate anti-clockwise until the arrows aligns into the 'locked' position.

**NOTE:** The HEPA filter and filter cone should be thoroughly cleaned at least once every three weeks.

Do not clean the HEPA filter using detergent or use external heat sources, such as a radiator to dry it.

**WARNING:** Do not reassemble or use the vacuum cleaner until the HEPA filter and filter cone have fully dried, as this could cause damage.

## Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place. Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	<p>The mains power adaptor is not securely connected</p> <p>The vacuum cleaner isn't fully inserted into the charging base.</p>	<p>Secure the vacuum cleaner into the charging base and then switch it on at the mains power supply.</p> <p>Check that the vacuum cleaner is fully secured into the charging base.</p>
The suction is poor.	<p>The air inlet or attachment is blocked.</p> <p>The dust container is almost full.</p> <p>The HEPA filter is blocked.</p> <p>The battery is running out of charge.</p>	<p>Disconnect the attachment and clear any blockage.</p> <p>Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.</p> <p>Clean the filter following the instructions in the section entitled 'Cleaning the HEPA filter and filter cone'.</p> <p>Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Cordless Hand Vac'.</p>
The vacuum cleaner has stopped working.	The battery has run out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Cordless Hand Vac'.

## Specifications

Product code: PF01096  
 Battery: 11.1 V  2200 mAh Li-ion (included)  
 Adaptor input: 100-240 V ~ 50/60 Hz 0.3 A  
 Adaptor output: 14 V  0.5 A 7.0 W  
 Average active efficiency: 82.03 %  
 Efficiency at low load (10 %): 73.50 %  
 No load power consumption: 0.1 W  
 Dust container capacity: 100 ml

**Notes:**



SEIT 1968

**Notes:**

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **customercare@upgs.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Petra will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

**It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

## **3** YEAR GUARANTEE

## **3** YEAR GUARANTEE

\*To be eligible for the extended guarantee, go to **[guarantee.upgs.com/petra](https://www.guarantee.upgs.com/petra)** and register your product within 30 days of purchase.

Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

MADE IN CHINA.

**[www.upgs.com/petra](https://www.upgs.com/petra)**

©Petra Trademark. All rights reserved.

CD310522/MD101022/V2

