



SINCE 1968

**CORDLESS
LINT REMOVER**

**INSTRUCTION
MANUAL**

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

If the power supply cable or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

Keep the appliance and power supply cable out of the reach of children.

Do not fit or use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

This appliance is for use on fabrics only; it should not be used on skin.

Do not use the appliance for anything other than its intended use.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not touch any moving parts on this appliance during use as this could cause injury.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use, before performing any cleaning or maintenance or storing away.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Do not use any cell or battery which is not designed for use with the product.

Secondary cells and batteries need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Keep batteries out of the reach of children.

Do not dispose of batteries in a fire.

Do not dismantle, open or shred secondary cells or batteries.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the unit at a local recycling station. Contact the local government offices for further details.

This product is fitted with 2 x 1.2 V 600 mAh Ni-MH rechargeable batteries (non-removable).

Care and Maintenance

Always switch off and unplug the lint remover from the mains power supply before attempting any cleaning or maintenance.

STEP 1: Wipe the lint remover with a soft, damp cloth and dry thoroughly.

Do not immerse the lint remover in water or any other liquid.

STEP 2: Check that the blades are free from debris (e.g., hair), as this could affect the performance of the lint remover.

NOTE: The lint container should be emptied and cleaned after each use.

Description of Parts



- | | |
|------------------------------------|-----------------------------|
| 1. Cordless Lint Remover main body | 6. Power button |
| 2. Protection cap | 7. Charging indicator light |
| 3. Blade cover | 8. Micro USB charging port |
| 4. Lint container | 9. Micro USB charging cable |
| 5. Blades | 10. Cleaning brush |

Charging the Cordless Lint Remover

Before first use, the lint remover must be charged for approx. 3-4 hours. Subsequent charging times will take max. 8 hours, dependent on use.

STEP 1: Connect the micro USB end of the micro USB charging cable (included) into the micro USB charging port on the lint remover.

STEP 2: Plug the USB end of the micro USB charging cable into a compatible USB charging port; the charging indicator light will flash to indicate that the battery is charging. Once the battery is fully charged, the charging indicator light will stop flashing and remain illuminated.

NOTE: Whilst charging, the lint remover may become warm.

CAUTION: Exercise caution when charging the lint remover; it must be stood upright on a dry, stable surface, away from other appliances.

WARNING: Do not leave the lint remover unattended whilst it is charging.

If the battery is exhausted, the charging indicator light will flash when attempting to turn on the lint remover.

It is recommended to charge the lint remover slightly before storage. This will help to prolong the life of the battery.

Using the Cordless Lint Remover

STEP 1: Remove the protection cap and place the garment to be treated onto a flat, even and clean surface. Straighten the garment to minimise creases.

STEP 2: Switch the lint remover on by pressing the power button.

STEP 3: Guide the lint remover over the garment using repeated, light, circular movements across the surface of the fabric.

STEP 4: Switch off the lint remover by pressing the power button and replace the protection cap.

NOTE: The lint remover will switch off automatically when the blade cover is unscrewed.

WARNING: To avoid damage to fabrics always use the lint remover on a flat surface.

Do not use the lint remover on buttons, embroidery, zips, loose threads or stitches.

Do not apply too much pressure during use to avoid damaging fabric.

Cleaning the Cordless Lint Remover

STEP 1: Remove the protection cap. Turn the lint container in an anticlockwise direction and pull away from the lint remover main body. Empty any lint from the container into a bin after each use.

STEP 2: Remove the blade cover by unscrewing it in an anticlockwise direction.

STEP 3: Carefully remove the blades; use the cleaning brush to scrape off fluff and lint remnants.

STEP 4: Reattach the blades by pushing back onto the lint remover main body until secure. Replace the blade cover by rotating in a clockwise direction until secure.

STEP 5: Attach the lint container by screwing back onto the main unit in a clockwise direction.

STEP 6: Replace the protection cap.

WARNING: The blades are delicate and sharp, exercise care during cleaning. Keep fingers and hands away from the blades during cleaning and maintenance.

Storage

Check that the lint remover is cool, clean and dry before storing in a cool, dry place.

Troubleshooting

Problem	Cause	Solution
The lint remover will not turn on.	The lint remover has run out of charge. The lint container or blade cover is not secured correctly to the lint remover main body.	Charge the lint remover following the instructions in the section entitled 'Charging the Cordless Lint Remover'. Reattach the lint container or blade cover to the lint remover main body by rotating in a clockwise direction until secure.
The lint remover is not removing lint from fabric.	Lint is wrapped around the blades.	Clean the blades following the instructions in the section entitled 'Cleaning the Cordless Lint Remover'.

Specifications

Product code: PF01034

Battery: 2 x 1.2 V 600 mAh Ni-MH rechargeable batteries (non-removable).

Working Voltage: 3 V DC

Charging Voltage: 5 V DC 1 A

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **customer care@upgs.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Petra will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

MADE IN CHINA.

www.petra-electric.com

©Petra Trademark. All rights reserved.

CD201022/MD000000/V1