 
 
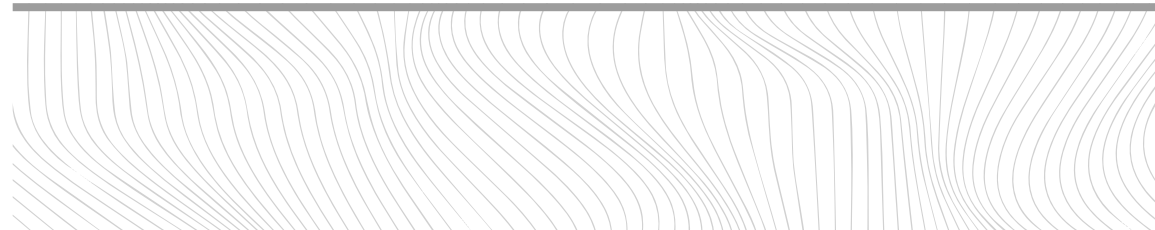 


User manual

Sandwich toaster

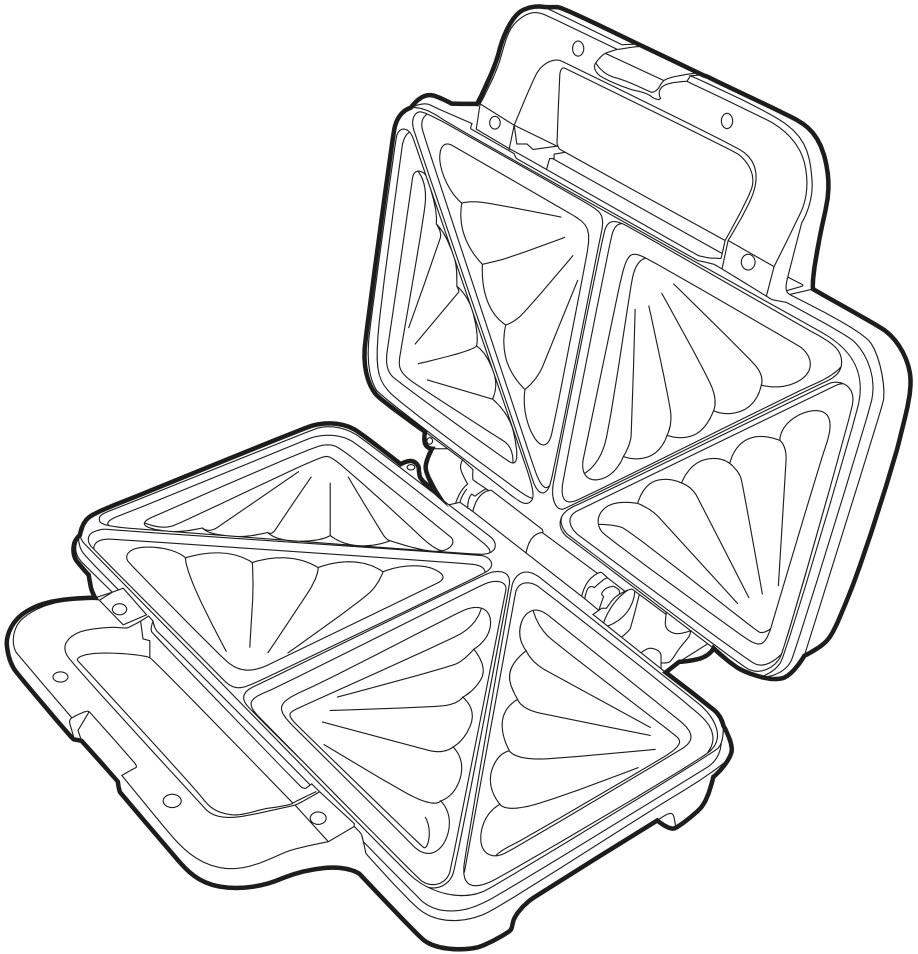

Description of parts

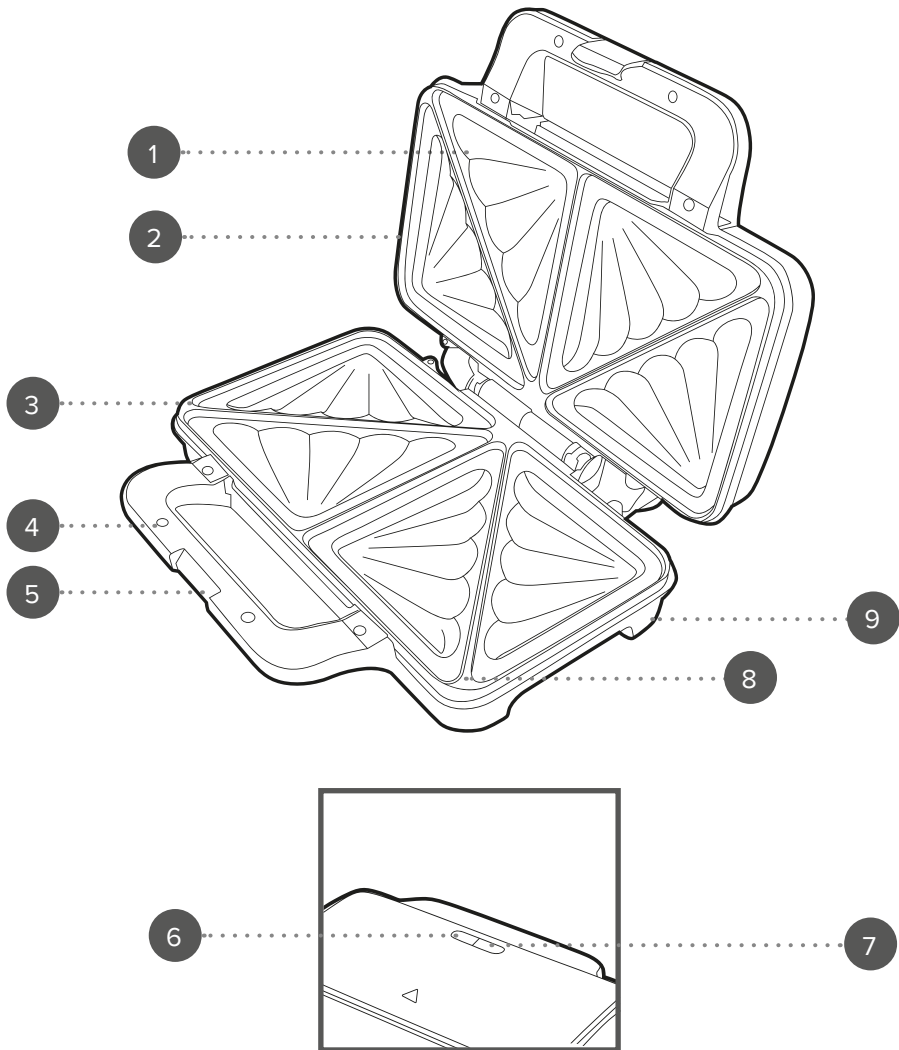

- 1. Sandwich toaster main unit
- 2. Upper housing
- 3. Lower housing
- 4. Cool-touch handle
- 5. Handle lock

- 6. Red power indicator light
- 7. Green ready indicator light
- 8. Non-stick coated cooking plates
- 9. Non-slip feet

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.

- Do not touch any sections of the appliance that may become hot during use, as this may cause injury.
- Never use the appliance near or below flammable materials, such as curtains, wall cupboards or shelves.
- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
- Always unplug the appliance after use and ensure it has cooled fully before performing any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- The outer surface of the appliance may get hot during operation.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.



WARNING: Keep the appliance away from flammable materials.

Care and maintenance

STEP 1: Before attempting any cleaning or maintenance, unplug the sandwich toaster from the mains power supply and allow to fully cool.

STEP 2: Wipe the sandwich toaster housing with a soft, damp cloth and dry thoroughly.

STEP 3: Remove baked on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or nonabrasive scourer.

Do not immerse the sandwich toaster in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the sandwich toaster, as this could damage the surface.



NOTE: The sandwich toaster should be cleaned after each use.

Instructions for use

Before first use

STEP 1: Switch off and unplug the sandwich toaster from the mains power supply.

STEP 2: Wipe the sandwich toaster housing with a soft, damp cloth and dry thoroughly. Do not immerse the sandwich toaster in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the sandwich toaster, as this could cause damage.



NOTE: When using the sandwich toaster for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the sandwich toaster.

Using the sandwich toaster

STEP 1: Prepare the sandwich that is to be toasted, taking care not to overfill the bread, as this could cause the ingredients to overflow.

STEP 2: Plug in and switch on the sandwich toaster at the mains power supply. The red power indicator light will illuminate, signalling that the sandwich toaster has been switched on and is heating up.

STEP 3: Preheat the sandwich toaster for approx. 3 minutes. The green ready indicator light will illuminate once the required temperature has been reached.

STEP 4: Carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating and stop the sandwich from sticking.

STEP 5: Place the prepared sandwich onto the lower non-stick coated cooking plate and then close the lid.

STEP 6: Toast the sandwich for approx. 2–4 minutes; check periodically by carefully opening the lid. If needed, the sandwich can be cooked a little while longer, until it is browned to preference.

STEP 7: Once cooking is complete, carefully open the lid and remove the toasted sandwich with a heat-resistant plastic or wooden spatula.

STEP 8: Switch off and unplug the sandwich toaster from the mains power supply and allow it to cool by leaving the lid open.



NOTE: Always preheat the non-stick coated cooking plates before starting to cook. During use the green ready indicator will cycle on and off to signal that the sandwich toaster is maintaining the temperature.



CAUTION: The non-stick coated cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.

WARNING: Exercise caution during cooking; the sandwich toaster will emit steam. Do not toast pastries with runny fillings or frosting. Do not toast torn slices of bread. Do not allow bread to burn.

Storage

Before storing in a cool, dry place, make sure that the sandwich toaster is cool, clean and dry. Never wrap the cord tightly around the sandwich toaster; wrap it loosely to avoid causing damage.

Specifications

Product code: PT2017

Input: 220–240 V~ 50/60 Hz

Output: 900 W

RECIPES



Toasted mushroom and sundried tomato

Ingredients

4 slices of bread
300 g mushrooms, sliced
115 g cheddar, grated
100 g baby spinach leaves
100 g sundried tomatoes, chopped
Salt and pepper, to taste
Cooking spray

Method

Heat a frying pan and add the cooking spray. Add the mushrooms and cook for approx. 3 minutes, stirring occasionally. Drain on a paper towel and season to taste. Evenly spread the mushrooms, cheddar, sundried tomatoes and baby spinach leaves onto one slice of the bread. Add the second slice of wholemeal bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Deluxe chicken

Ingredients

4 slices of bread
100 g cheddar, grated
Roast chicken, cooked and shredded
4 baby spinach leaves
Salt and pepper, to taste

Method

Evenly spread the cheddar, chicken and baby spinach leaves onto one slice of the granary bread. Add the second slice of granary bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Toasted banoffee sandwich

Ingredients

4 slices of bread
1 large banana, sliced
60 g toffee pieces, chopped

Method

Evenly spread the banana and toffee pieces onto two of the pieces of bread.

Add the second slice of bread on top, to complete the sandwich.

Place the sandwich onto the lower non-stick coated cooking plate.

Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Toasted blueberry bread and butter pudding

Ingredients

4 slices of bread
1 medium egg
1 egg white
100 ml milk
75 ml double cream
50 g blueberries
50 g butter
2 tbsp golden syrup
1 tbsp caster sugar
½ tsp vanilla extract
¼ tsp mixed spice

Method

Whisk the egg and egg white into a foam.

Stir in the milk, double cream, mixed spice and vanilla extract.

Dip the bread into the mixture, ensuring that both sides are coated.

Scatter the blueberries on top and drizzle with the golden syrup.

Place the sandwich onto the lower non-stick coated cooking plate.

Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd., ...
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.

CD161123/MD000000/V1