



WARNING: The waffle maker and cooking plates get very hot during use; always use oven-resistant gloves to avoid injury.

Hints and Tips

1. Avoid spillage by adding ingredients into the centre of each well.
2. If using a batter, slowly pour a small amount into the non-stick coated cooking plates and wait for it to distribute evenly before adding more, to avoid the risk of overfilling.
3. Sieving dry ingredients, such as flour, will help to make a smooth consistency and avoid any lumps.
4. Avoid opening the waffle maker during cooking, as it will allow heat to escape and prevent bubbles from forming.
5. The best indicator as to when waffles are ready is when steam stops escaping from the waffle maker.
6. Always use butter or cooking oil to precondition the non-stick coated cooking plates. Not only will this help to protect the non-stick coating, it will also make it easier to remove the cooked waffles.
7. Using heat-resistant plastic or wooden utensils will help to protect the non-stick coating.
8. To save time when using the waffle maker, prepare the ingredients and mixture well in advance.

Storage

Check that the waffle maker is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the waffle maker; wrap it loosely to avoid causing damage.

Specifications

Product code: PT2551

Input: 220–240 V ~ 50–60 Hz

Output: 800–1000 W




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Bubble waffle maker

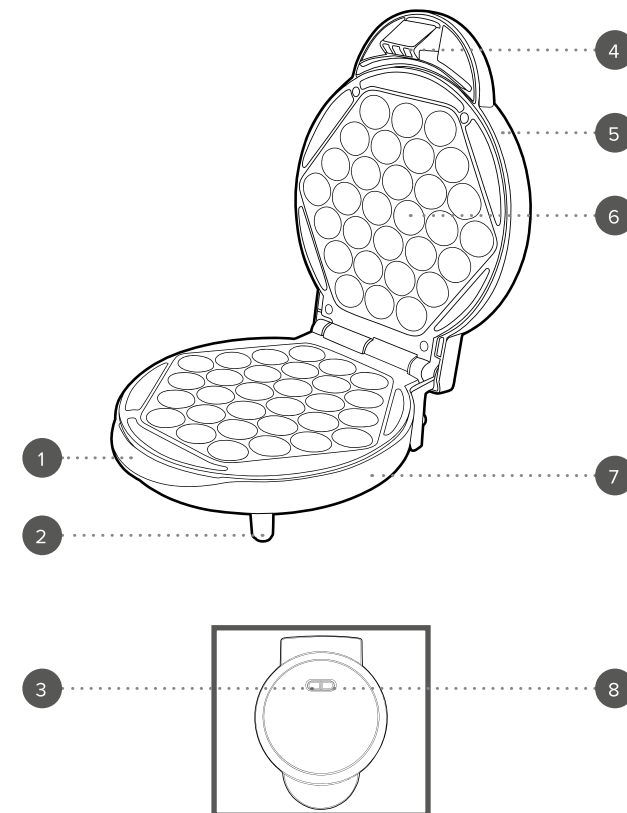

1. Cool-touch handle
2. Non-slip feet
3. Green power indicator light
4. Handle lock

5. Upper housing
6. Non-stick coated cooking plates
7. Lower housing
8. Red ready indicator light

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin DO2 X658. **ROI.**
MADE IN CHINA.

CD020420/MD260423/V4

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.
- Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high

humidity conditions.

- Do not move the appliance whilst it is in use.
- Do not touch any sections of the appliance that may become hot during use, as this may cause injury.
- Do not use the appliance near or below flammable materials, such as curtains, wall cupboards or shelves.
- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
- Always unplug the appliance after use and ensure it has cooled fully before performing any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- The outer surface of the appliance may get hot during operation.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.



WARNING: Keep the appliance away from flammable materials.

Care and Maintenance

STEP 1: Before attempting any cleaning or maintenance, unplug the waffle maker from the mains power supply and allow to cool fully.

STEP 2: Wipe the waffle maker housing with a soft, damp cloth and dry thoroughly.

STEP 3: Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or non-abrasive scourer.

Do not immerse the waffle maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the waffle maker or its accessories, as this could damage the surface.



NOTE: The waffle maker should be cleaned after each use.

Instructions for use

Before first use

Clean the waffle maker following the instructions in the section entitled 'Care and Maintenance'.



NOTE: When using the waffle maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the waffle maker.

Using the Bubble Waffle Maker

Before each use, carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in with a paper towel. This will help to prolong the life of the non-stick coating and stop the waffle from sticking.

STEP 1: Prepare the waffle batter.

STEP 2: Plug in and switch on the waffle maker at the mains power supply. The green power indicator light will illuminate, signalling that the waffle maker has been switched on and is heating up.

STEP 3: Preheat the waffle maker for approx. 4 minutes. The red ready indicator light will illuminate once the required temperature has been reached.

STEP 4: Carefully open the lid using heat-resistant oven gloves.

STEP 5: Pour some of the batter into the centre of the lower non-stick coated cooking plate and then carefully close the lid. To avoid spillages, slowly pour a small amount of the batter into the centre of the plate and wait for it to evenly distribute before adding more.

STEP 6: Cook for approx. 4–10 minutes or until golden brown; check periodically by carefully opening the lid using heat-resistant gloves. Avoid opening the waffle maker before 4 minutes of cooking, as this will prevent bubbles from forming. If needed, the waffles can be cooked a little while longer, until they are browned to preference.

STEP 7: Once cooking is complete, use heat-resistant oven gloves to carefully open the lid and then remove the waffles with a heat-resistant plastic or wooden spatula.

When creating multiple batches of waffles, close the lid after removing each batch to maintain the heat.

STEP 8: Switch off and unplug the waffle maker from the mains power supply. Leave the lid open and allow to cool.



NOTE: Do not overfill the non-stick coated cooking plate; the batter will expand whilst cooking. The bubble waffle maker is fitted with a two-step hinge to allow for this. It is recommended to fill each well by $\frac{2}{3}$. Always preheat the non-stick coated cooking plates before starting to cook. During use the red ready indicator will cycle on and off to indicate that the waffle maker is maintaining the temperature.



CAUTION: Exercise caution during cooking; the waffle maker will emit steam.