 
 
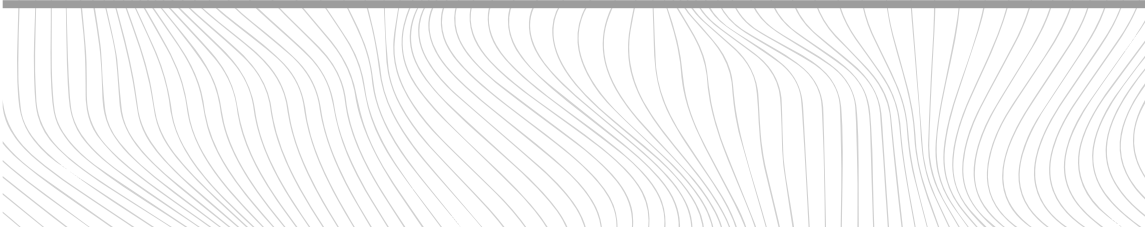 


User manual

Popcorn maker

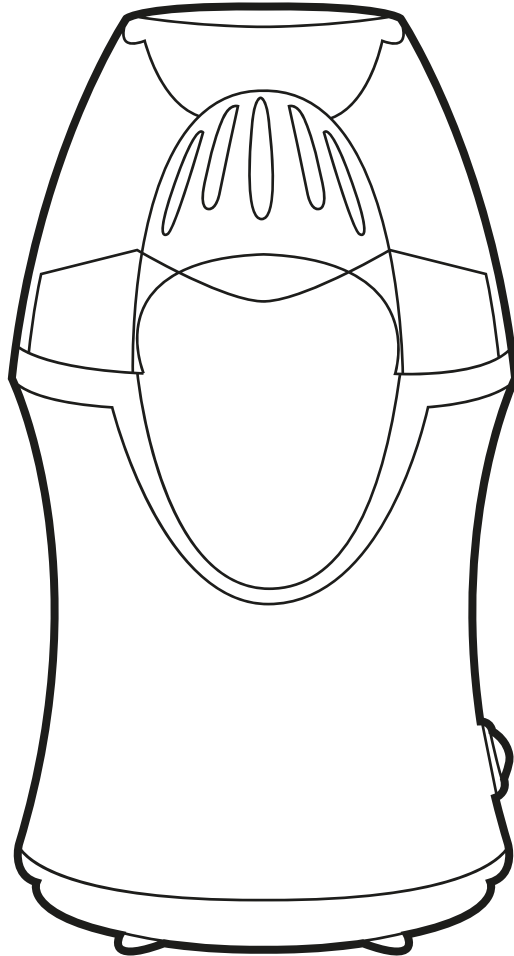

Description of parts

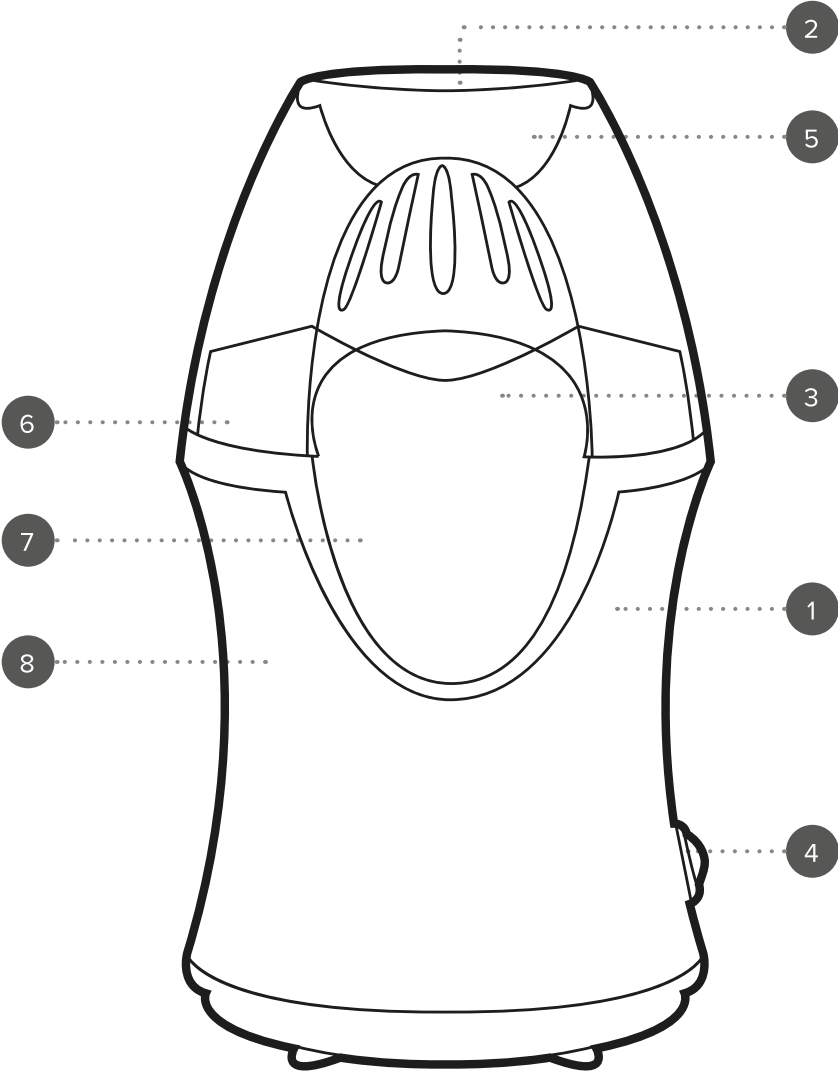

- 1. Popcorn Maker main unit
- 2. Popcorn inlet
- 3. Popcorn outlet
- 4. On/off switch

- 5. Measuring cup
- 6. Top cover
- 7. Spout
- 8. Aluminium heat chamber (inside)

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.
- Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of reach of children.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not overload the appliance.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- The outer surface of the appliance may get hot during operation.



CAUTION: Hot surface - do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.



WARNING: Keep the appliance away from flammable materials.

Care and Maintenance

Switch off and unplug the popcorn maker from the mains power supply and allow to cool fully before performing any cleaning or user maintenance.

STEP 1: Wash the top cover and measuring cup in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the popcorn maker with a soft, damp cloth and allow to dry thoroughly.

Never immerse the popcorn maker in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the popcorn maker, as this could cause damage.



NOTE: The popcorn maker is not suitable for use in a dishwasher. Always clean the popcorn maker before, and immediately after use.

Instructions for use

Before first use

Before using the popcorn maker for the first time, wipe it down with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the popcorn maker in water or any other liquid.



NOTE: When using the popcorn maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the popcorn maker.

Using the Popcorn Maker

STEP 1: Place the popcorn maker onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Put one measuring cup full of popcorn kernels into the aluminium heat chamber through the popcorn inlet.

STEP 3: Do not use more than one measuring cup of popcorn at a time, as this will overfill the Popcorn Maker and could result in damage.

STEP 4: Secure the measuring cup onto the top cover to prevent losing any popcorn as it cooks.

STEP 5: Place a large bowl underneath the spout, taking care that the edge of the bowl touches the Popcorn Maker.

STEP 6: Plug in and switch on the popcorn maker on at the mains power supply. Turn on the popcorn maker using the on/off switch.

It will take approx. three minutes for all of the popcorn kernels to pop.

STEP 7: When all of the popcorn is made, turn off the popcorn maker using the on/off switch and unplug it from the mains power supply.

Allow the popcorn maker to cool for approx. 10–12 minutes before using it again.



WARNING: Some popcorn kernels may not expand or puff properly and may escape from the popcorn outlet during operation. Exercise caution and avoid immediate contact with the popcorn kernels, as they will be very hot. Do not run unit without popcorn kernels inside.

Storage

Check that the popcorn maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the power supply cord tightly around the popcorn maker; wrap it loosely to avoid causing damage.

Specifications

Product code: PT2902

Input: 220–240 V ~ 50–60 Hz

Output: 1200 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.

CD180523/MD000000/V1